


## **Installation Instructions**

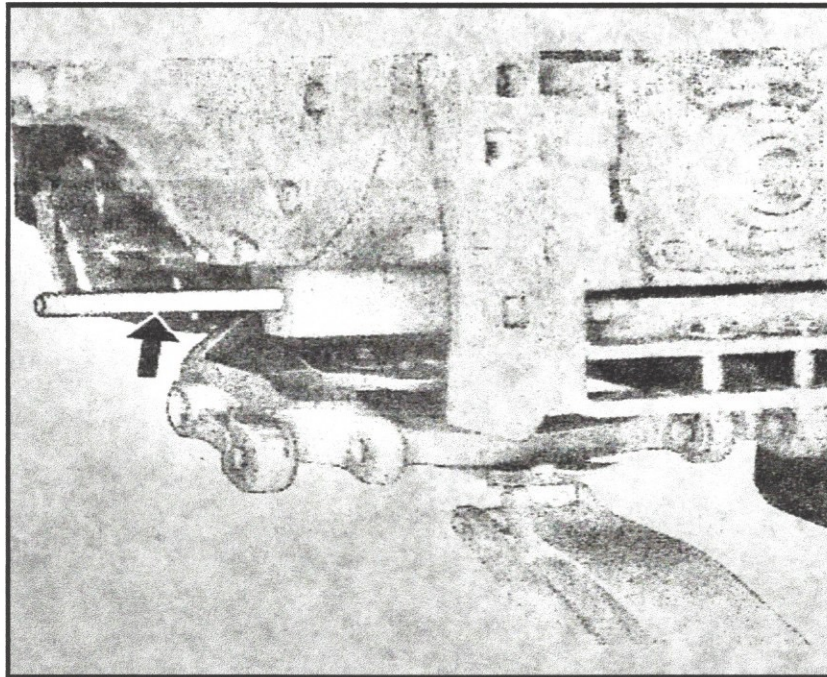

### **Lower Lift Arms**

**Drain Oil Using Plug On Bottom of Housing**

**Place Jack Under Wishbone**

**Remove Plugs From Each End of Wishbone**

**Pull Shaft Out From Either Side**

**Lower Wishbone To Expose Seals**

**Remove Old Seals By Inserting A Type Of Rod On The  
Opposite Side Of Housing Drive Seals Out**

**Leave Bushings In**

**If Replacing Bushings Outside Rounded Edge Goes In First  
Install New Seals There Is No Right Or Wrong Side On Seals  
Drive In Flush With The Housing**

**On 30 And 40 Series Tractors Seals And Bushings Are One Piece,  
You Can Drive The Old Seals And Bushings Out By Inserting A  
Rod From The Opposite Side**

**Install New Bushings With Rounded Edge In First  
Then Install Seals Drive Seal In Till Flush With Housing**